

# Valve Adapter List

## For Heating Control H1

If the ubisys heating control H1 does not fit on the valve of your heater, you will probably need an adapter. The valve adapter is mounted between the H1 and your heating valve. The list does not claim to be complete. For other valve types, other adapters may be required.

The adapters are available on online platforms such as Amazon, Conrad, Voelkner, etc.

**Note:** Please use only metal adapters.

| Valve type                     | Drawing | Identifying mark/<br>symbol    | Adapter | Manufacturer<br>code number |
|--------------------------------|---------|--------------------------------|---------|-----------------------------|
| Comap/<br>Westerm<br>M28 x 1,5 |         |                                |         | 700 100 007                 |
| Danfoss RAVL                   |         | 26 mm collar<br>with 4 grooves |         | 700 100 003                 |
| Danfoss RAV                    |         | 34 mm collar<br>with 4 grooves |         | 700 100 008                 |
| Oventrop<br>M30 x 1,0          |         |                                |         | 700 100 002                 |
| Herz M28 x 1,5                 |         |                                |         | 700 100 004                 |
| TA M28 x 1,5                   |         |                                |         | 700 100 006                 |
| Giacomini Ø<br>22,6mm          |         |                                |         | 700 100 009                 |
| Markaryd<br>M28 x 1,5mm        |         |                                |         | 700 100 010                 |
| Ondal                          |         |                                |         | 700 100 011                 |
| Vaillant                       |         |                                |         | 700 100 001                 |